



## Deluxe Memory Man ANALOG DELAY WITH CHORUS/VIBRATO

Congratulations on your purchase of the Deluxe Memory Man with Chorus/Vibrato. The Deluxe Memory Man is designed with state-of-the-art solid state circuitry to give you years of high quality, trouble free performance. The EH XO version of the Deluxe Memory Man is an exact reissue of the original Deluxe Memory Man with one upgrade: true bypass.

### -- POWER --

**Warning:** Your unit comes equipped with a 24 Volt/100mA AC external power adapter. Use only the power adapter supplied, and make sure it is appropriate to your location (USA, Europe, Japan, Australia). Use of the wrong adapter can cause damage to the unit or to you, and will void the warranty. Connect the included 24DC/100mA AC Adapter to the Power Jack, located at the top center of the Deluxe Memory Man.

### - OPERATING INSTRUCTIONS and CONTROLS -

Connect your guitar to the **INPUT** jack, and the **OUTPUT** jack into the input of your amp. Your Memory Man can be used in combination with other effects devices — experiment to develop your own unique sound. The bypass footswitch on top of the unit allows you to switch the effect in and out. Unmodified signal is always available at the **DIRECT OUT** jack. Set the **LEVEL** control so that the **OVERLOAD LED** blinks on with the loudest notes you play, but does not come on very brightly or too frequently. Overdriving the unit will cause distortion.

The **BLEND** control allows you to vary the mix of direct and delayed signals; it is set to the center position equal levels of both.

The **FEEDBACK** provides delay repeats, or multiple echoes. If set very high, runaway oscillation will occur. Fairly high feedback with short delay settings produces a reverb effect.

The **DELAY** control determines the time between direct and delayed signals, and between the repeats when feedback is used. Strange, eerie and unusual pitch-shift effects can be produced by changing the delay while playing, especially while using feedback.

The **CHORUS/VIBRATO** switch allows you to choose between Chorus or Vibrato mode. The **DEPTH** control sets the amount of modulation in the delay time. The modulation rate is slow for chorus and faster for vibrato. The Vibrato mode produces a “Doppler” pitch shifting effect in the delayed signal. A rich, vibrant chorus effect is produced with the switch set to CHORUS, delay fairly short, blend at the center, chorus set high, and feedback fairly high. When you determine the control settings for your favorite effects, make note of them so you can quickly set up the unit before playing.

The **FOOTSWITCH** engages/disengages the effect. If the effect is engaged, the status LED above the footswitch will light up. In true-bypass mode, the status LED is off.

Unplug after use. Avoid operating near moisture. Rock-n-Roll!