




STARVILLE

Stage TRI LED Bundle
Complete
LED lighting set

Musikhaus Thomann
Thomann GmbH
Hans-Thomann-Straße 1
96138 Burgebrach
Germany
Telephone: +49 (0) 9546 9223-0
E-mail: info@thomann.de
Internet: www.thomann.de

18.02.2016, ID: 238663 (V2)

Table of contents

1	General notes	5
	1.1 Further information.....	6
	1.2 Notational conventions.....	7
	1.3 Symbols and signal words.....	8
2	Safety instructions	10
3	Features	16
4	Installation	17
5	Setup	21
6	Connections and controls	24
7	Operation	32
	7.1 Starting up the device.....	32
	7.2 Main menu.....	32
	7.3 Menu overview.....	41
	7.4 Functions in 2-channel DMX mode (d.-P5).....	44
	7.5 Functions in 3-channel DMX mode (d.-P1).....	46

7.6	Functions in 4-channel DMX mode (d.-P2).....	47
7.7	Functions in 7-channel DMX mode (d.-P7).....	47
7.8	Functions in 8-channel DMX mode (d.-P3)	50
7.9	Functions in 14-channel DMX mode (d.-P4).....	51
7.10	Functions in 15-channel DMX mode (d.-P6).....	53
7.11	Functions of foot switch.....	54
7.12	Remote control functions.....	55
7.13	Reset to factory defaults.....	57
8	Technical specifications.....	58
9	Plug and connection assignment.....	59
10	Cleaning.....	60
11	Protecting the environment.....	61

1 General notes

This manual contains important instructions for the safe operation of the unit. Read and follow the safety instructions and all other instructions. Keep the manual for future reference. Make sure that it is available to all those using the device. If you sell the unit please make sure that the buyer also receives this manual.

Our products are subject to a process of continuous development. Thus, they are subject to change.

1.1 Further information

On our website (www.thomann.de) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

1.2 Notational conventions

This manual uses the following notational conventions:

Letterings

The letterings for connectors and controls are marked by square brackets and italics.

Examples: *[VOLUME]* control, *[Mono]* button.

Displays

Texts and values displayed on the device are marked by quotation marks and italics.

Examples: *'24ch'*, *'OFF'*.

Cross-references

References to other locations in this manual are identified by an arrow and the specified page number. In the electronic version of the manual, you can click the cross-reference to jump to the specified location.

Example: See [↪](#) *'Cross-references'* on page 7.

1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
WARNING!	This combination of symbol and signal word indicates a possible dangerous situation that can result in death or serious injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.

Warning signs	Type of danger
 A yellow triangular warning sign with a black border and a black lightning bolt symbol in the center.	Warning – high-voltage.
 A yellow triangular warning sign with a black border and three wavy lines representing heat in the center.	Warning – hot surface.
 A yellow triangular warning sign with a black border and a black exclamation mark in the center.	Warning – danger zone.

2 Safety instructions

Intended use

This device is intended to be used as an electronic illumination effect using LED technics. The device is designed for professional use and is not suitable for use in households. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Safety**DANGER!****Danger for children**

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.

**DANGER!****Electric shock caused by short-circuit**

Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.



DANGER!

Electric shock caused by high voltages inside

Within the device there are areas where high voltages may be present. Never remove any covers.

There are no user-serviceable parts inside.

Do not use the device if covers, protectors or optical components are missing or damaged.



DANGER!

Electric shock caused by short-circuit

Always use proper ready-made insulated mains cabling (power cord) with a protective contact plug. Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.



WARNING!

Eye damage caused by high light intensity

Never look directly into the light source.



WARNING!

Risk of epileptic shock

Strobe lighting can trigger seizures in photosensitive epilepsy. Sensitive persons should avoid looking at strobe lights.



WARNING!

Risk of burns

The surface of the device can become very hot during operation.

Do not touch the device with bare hands during operation, and after switching off wait for at least 15 minutes.



NOTICE!

Risk of fire

Do not cover the device nor any ventilation slots. Do not place the device near any direct heat source. Keep the device away from naked flames.



NOTICE!

Operating conditions

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations.



NOTICE!

Power supply

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user.

Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.

3 Features

The LED lighting set is especially suited for professional lighting tasks, e.g. during events, on rock music stages, in theatre and musical productions. It is characterized by a low power consumption and long life.

Special features of this device:

- 4 LED spots with 7 tri-colour LEDs
- Control via DMX (7 different modes), buttons and display on the unit, foot switch and infrared remote control (optional available)
- 14 preprogrammed automatic shows
- Sound control
- Master/slave mode
- A T-bar tripod, a foot switch unit and a carrying case are also included in the delivery.

4 Installation

Unpack and carefully check that there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the device against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

**NOTICE!****Risk of overheating**

Always ensure sufficient ventilation.

The ambient temperature must always be below 40 °C (104 °F).



NOTICE!

Use of stands

When mounting the device onto a stand, ensure that the stand is in a safe and stable position and that the weight of the device does not exceed the maximum permissible load capacity of the stand.



NOTICE!


Possible data transmission errors

For error-free operation make use of dedicated DMX cables and do not use ordinary microphone cables.

Never connect the DMX input or output to audio devices such as mixers or amplifiers.

Pre-assembled spots

The four spots (1 ... 4, from left to right) are pre-assembled at the T-bar. Only the tripod is yet to be installed and the foot switch unit to be connected.

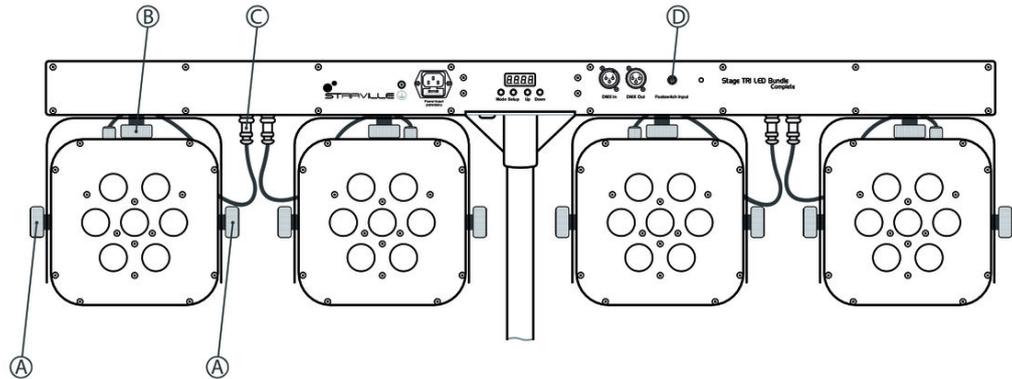

A	Locking screws to fix the height and angle of inclination.
B	Locking screw for fixing the spot on the T-bar and for horizontal alignment (direction of the beam).


C	Electrical connection of the spot on the T-bar (pre-assembled).
D	1/4" phone socket to connect the foot switch unit. The cable with the phone jack is pre-as on the foot switch unit.

5 Setup

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.

Connections in DMX mode

Connect the DMX input of the device to the DMX output of a DMX controller or another DMX device. Connect the output of the first DMX device to the input of the second one, and so on to form a daisy chain. Always ensure that the output of the last DMX device in the daisy chain is terminated with a resistor ($110\ \Omega$, $\frac{1}{4}\ \text{W}$).

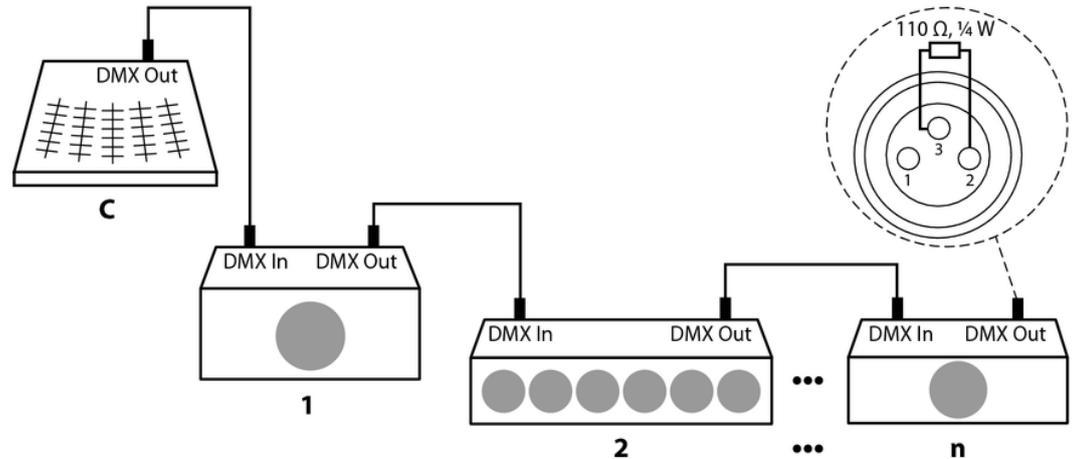


Connections in master/slave mode

When you configure a group of devices in master/slave mode, the first unit will control the other units for an automatic, sound-activated, synchronized show. This function is ideal when you want to start a show immediately. Connect the DMX output of the master device to the DMX input of the first slave device. Then connect the DMX output of the first slave device to the DMX input of the second slave device and so on.

6 Connections and controls


Front panel

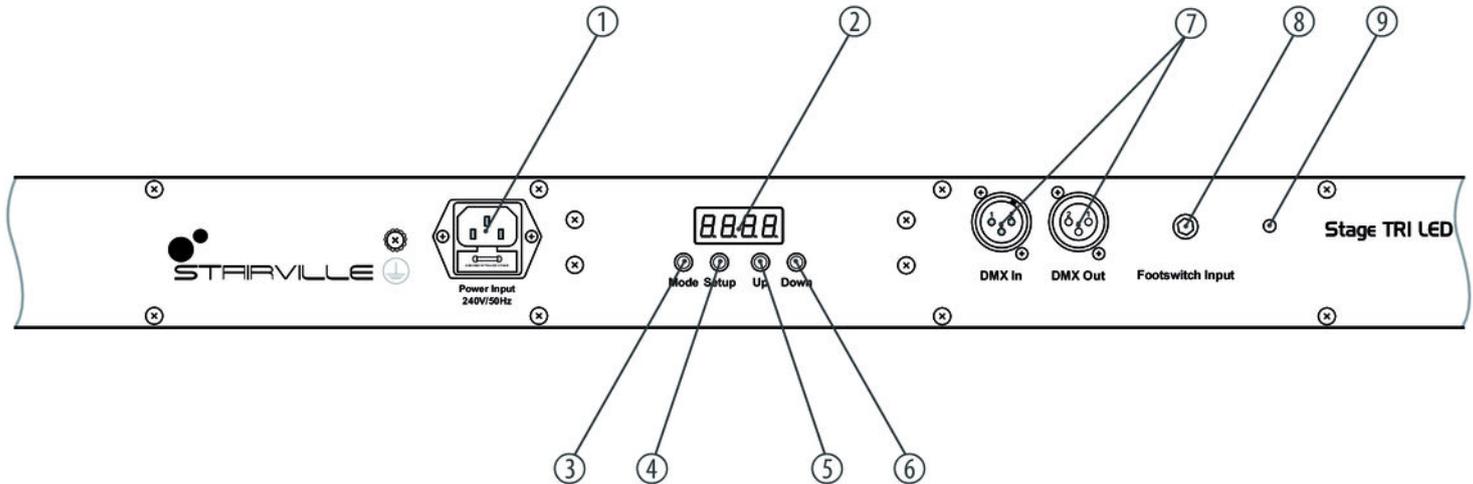

1	Plug for mains cable with fuse holder.
2	Display.
3	Button <i>[Mode]</i> Activates the main menu and moves between menu items. Closes an opened submenu.
4	Button <i>[Setup]</i> Selects an option of the respective operating mode, confirms the set value.
5	Button <i>[Up]</i> Increases the displayed value by one.
6	Button <i>[Down]</i> Decreases the displayed value by one.
7	<i>[DMX In] / [DMX Out]</i> DMX input or output.


- | | |
|---|---|
| 8 | <i>[Footswitch Input]</i>
1/4" phone socket to connect the foot switch unit. |
| 9 | Infrared sensor for the IR remote control signal. |

Foot switch unit

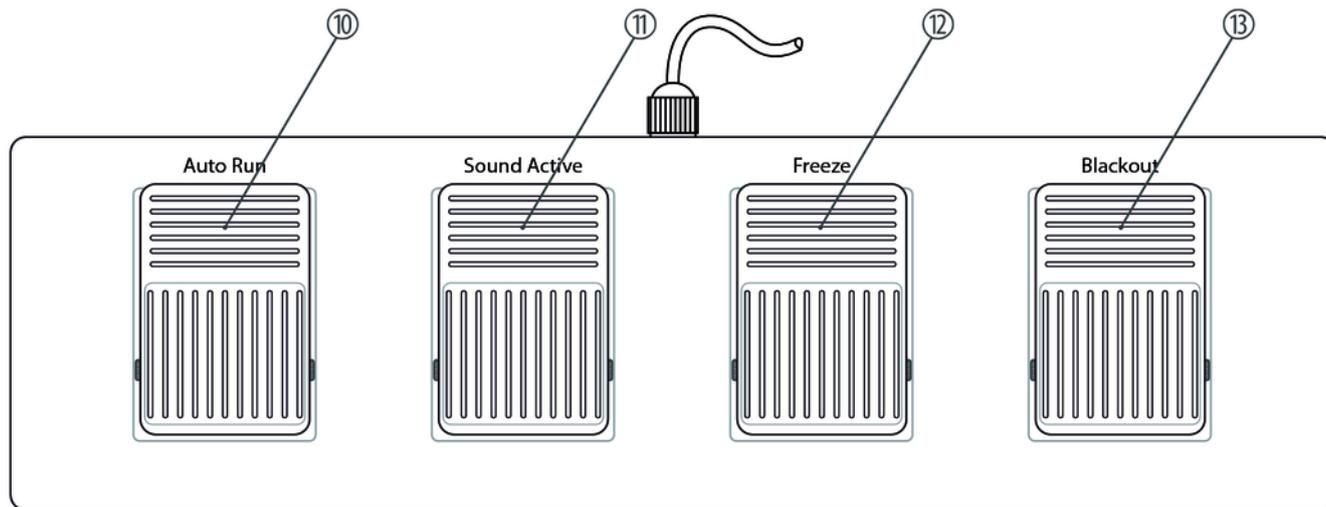

10	Foot switch [<i>Auto Run</i>] Activates the automatic mode (playback of the preprogrammed automatic shows).
11	Foot switch [<i>Sound Active</i>] Activates the sound control mode (playback of the sound-controlled automatic shows).
12	Foot switch [<i>Freeze</i>] Freezes the running show or continues it after a break.
13	Foot switch [<i>Blackout</i>] Activates or deactivates the blackout for all LEDs.

**Infrared remote control
(optional available)**

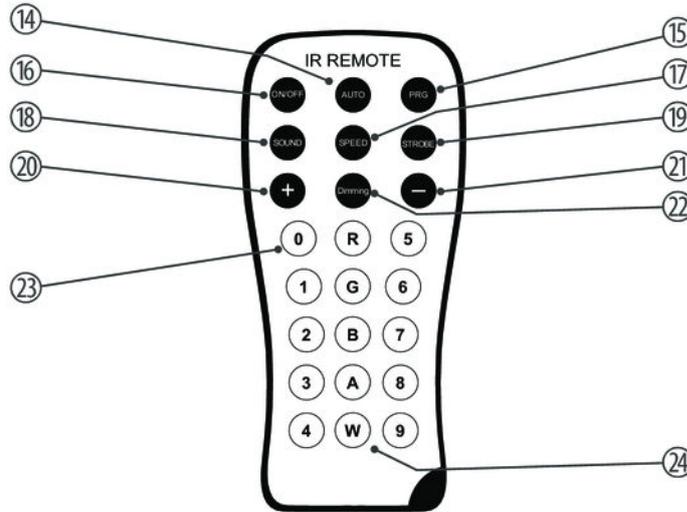

14	<i>[AUTO]</i> Activates the automatic mode.
15	<i>[PRG]</i> Activates the preprogrammed automatic show mode. Use the <i>[+]</i> and <i>[-]</i> buttons to select the desired programme.
16	<i>[ON/OFF]</i> Activates/deactivates the device.
17	<i>[SPEED]</i> Activates the setup mode for the programme speed. Use the <i>[+]</i> and <i>[-]</i> buttons to set the speed.
18	<i>[SOUND]</i> Activates the sound controlled mode. Use the <i>[+]</i> and <i>[-]</i> buttons to set the sensitivity of the built-in microphone.
19	<i>[STROBE]</i> Activates the setup mode for the strobe speed. Use the <i>[+]</i> and <i>[-]</i> buttons to set the speed.

20	[+] Increases the set value.
21	[-] Decreases the set value.
22	[Dimming] Activates the dimming function for static colours. Use the [+] and [-] buttons to set the value for each static colour.
23	[0 ... 9] Numeric keys for the direct selection of static colours.
24	[R], [G], [B], [A], [W] Buttons for selecting the colour hue in dimming operation.

7 Operation

7.1 Starting up the device

Connect the unit to the power grid to start the operation. After a few seconds the display shows a running reset. Then the unit is ready for use.

7.2 Main menu

Press *[Mode]* to activate the main menu and select an operating mode. Use *[Setup]* to select further options. Use *[Up]* and *[Down]* to change the respectively shown value. When the display shows the desired value, press *[Mode]*.

If you don't press any button for about 30 seconds, the display turns off. Press any key to reactivate the display showing the last menu.

The set values are retained even if you disconnect the device from the mains.

Operating mode 'Built-in automatic show'

A built-in automatic show can only be activated if the unit is working in stand-alone mode or as master device in a master / slave combination. This setting is only relevant if the unit is not controlled via DMX.

Press *[Mode]* repeatedly until the display shows 'Pr.xx'. Now you can select one of the preprogrammed automatic shows. Use *[Up]* and *[Down]* to select a value between 'Pr.01' and 'Pr.14'. The following table shows the programmes that are available.

Programme	Description
Pr.01	Static colours
Pr.02	Colour fading 1
Pr.03	Colour fading 2
Pr.04	Fade in / fade out
Pr.05	Colour change 1
Pr.06	Chase 1
Pr.07	Chase 2
Pr.08	Chase 3

Programme	Description
Pr.09	Chase 4
Pr.10	Chase 5
Pr.11	Chase 6
Pr.12	Colour change 2
Pr.13	Chase 7
Pr.14	Chase 8

Settings for programme 01:

For 'Pr.01', you can choose from 7 colours or blackout. Press *[Setup]*. Now use *[Up]* and *[Down]* to select one of the colours.

Press *[Setup]* to set the strobe frequency. Now use *[Up]* and *[Down]* to select a value between 'FS00' (slow) and 'FS99' (fast).

Settings for programmes 02 to 12:

To set the speed of the selected automatic show, repeatedly press *[Setup]* until the display shows 'SPxx'. Now use *[Up]* and *[Down]* to select a value between 'SP01' (slow) and 'SP99' (fast) or 'SPFL' (Flash effect).

To set the fade speed of the selected automatic show, repeatedly press *[Setup]* until the display shows 'Fdxx'. Now use *[Up]* and *[Down]* to select a value between 'Fd00' and 'Fd99'.

To set the strobe frequency, repeatedly press *[Setup]* until the display shows 'FSxx'. Now use *[Up]* and *[Down]* to select a value between 'FS00' (slow) and 'FS99' (fast).

Settings for programmes 13 and 14:

In addition to the adjustment options for programmes 02 to 12 you can set the running colour and the background colour here.

To set the background colour, repeatedly press *[Setup]* until the display shows '1.xxx'. Now use *[Up]* and *[Down]* to select a background colour.

To set the running colour, repeatedly press *[Setup]* until the display shows '2.xxx'. Now use *[Up]* and *[Down]* to select a running colour.

Operating mode 'Automatic'

Automatic operation can only be activated if the unit is working in stand-alone mode or as master device in a master / slave combination. This setting is only relevant if the unit is not controlled via DMX.

Press *[Mode]* repeatedly until the display shows 'AUTO'. Press *[Setup]*. Now you can select the number of loops for the programmes to run. Use *[Up]* and *[Down]* to select a value between 'n.001' and 'n.100'.

Press *[Setup]* to adjust the speed. Use *[Up]* and *[Down]* to select a value between 'SP01' (slow) and 'SP99' (fast) or 'SPFL' (flash effect).

To adjust the fade speed, repeatedly press *[Setup]* until the display shows 'Fdxx'. Now use *[Up]* and *[Down]* to select a value between 'Fd00' and 'Fd99'.

To set the strobe frequency, repeatedly press *[Setup]*. Now use *[Up]* and *[Down]* to select a value between 'FS00' (slow) and 'FS99' (fast).

In the automatic operating mode, the built-in programmes run one after another. To start the automatic sequence from a specific programme, repeatedly press *[AUTO]*. However, it is not possible to set a certain programme permanently as start programme.

DMX mode

This setting is only relevant if the unit is controlled via DMX.

Press *[Mode]* repeatedly until the display shows 'd.xxx'.

Now you can set the number of the first DMX channel to be used by the device (DMX address). Use *[Up]* and *[Down]* to select a value between 1 and 512 (the display shows 'd.001' ... 'd.512').

Make sure that this number matches the configuration of your DMX controller. The following table shows the highest possible DMX address for the different DMX modes.

Mode	Highest possible DMX address
2-channel	511
3-channel	510
4-channel	509
7-channel	506
8-channel	505
14-channel	499
15-channel	498

Press *[Setup]*. Use *[Up]* and *[Down]* to select one of the following DMX operating modes:

- 'd.-P1' (3 channels)
- 'd.-P2' (4 channels)
- 'd.-P3' (8 channels)
- 'd.-P4' (14 channels)
- 'd.-P5' (2 channels)
- 'd.-P6' (15 channels)
- 'd.-P7' (7 channels)

Operating mode 'Slave'

This setting is only relevant if the unit is operated as slave device in a master / slave configuration and is not controlled via DMX.

Press *[Mode]* repeatedly until the display shows 'SLAV'.

Sound-control

A sound-controlled automatic show can only be activated if the unit is working in stand-alone mode or as master device in a master / slave combination. This setting is only relevant if the unit is not controlled via DMX.

Press *[Mode]* repeatedly until the display shows 'SU.xx'. This will activate a sound-controlled automatic show.

Press *[Setup]*. Now you can adjust the sound-control sensitivity. Use *[Up]* and *[Down]* to select a value between 0 (low sensitivity) and 31 (high sensitivity), the display shows 'SU.00' ... 'SU.31'.

Constant unicoloured pattern


A constant unicoloured pattern can only be activated if the unit is working in stand-alone mode or as master device in a master / slave combination. This setting is only relevant if the unit is not controlled via DMX.

Press *[Mode]* repeatedly until the display shows 'Colr'. Press *[Setup]*.


Use *[Up]* and *[Down]* to choose from the following options:


Display	Description
'r.000' ... 'r.255'	Red
'G.000' ... 'G.255'	Green
'b.000' ... 'b.255'	Blue

7.3 Menu overview

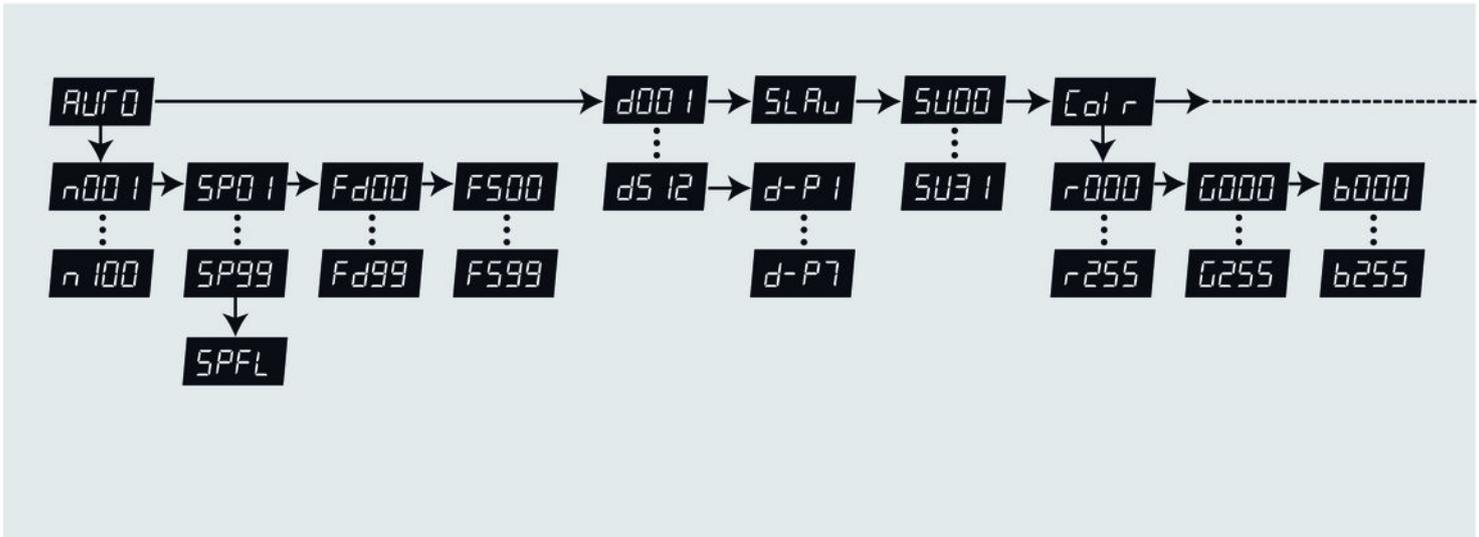

Stage TRI LED Bundle Complete

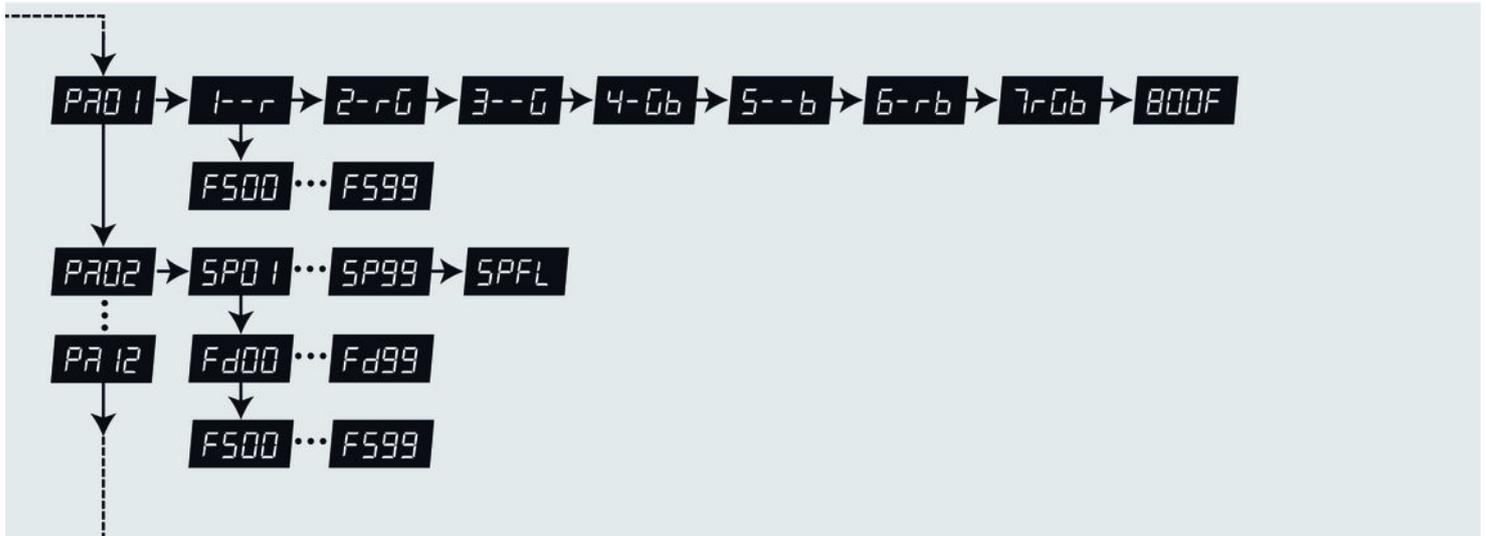

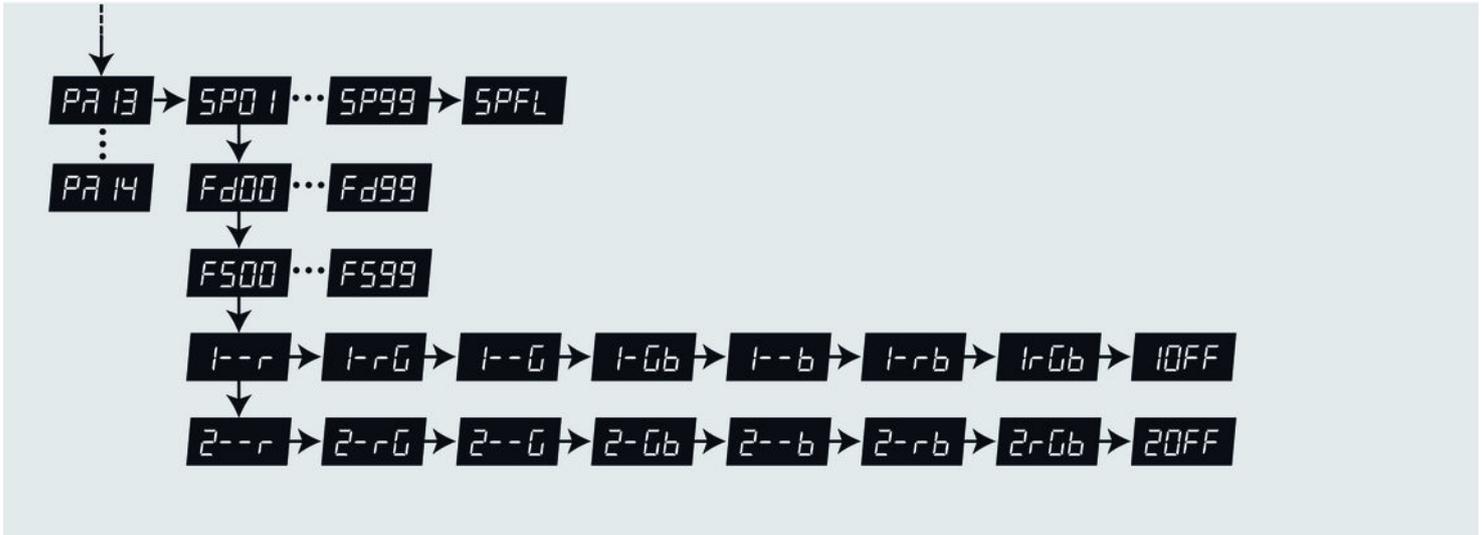

Stage TRI LED Bundle Complete

7.4 Functions in 2-channel DMX mode (d.-P5)

Channel	Value	Function
1	0...9	LEDs off
	10...19	Constant unicoloured pattern in red for all LEDs
	20...29	Constant unicoloured pattern in yellow for all LEDs
	30...39	Constant unicoloured pattern in green for all LEDs
	40...49	Constant unicoloured pattern in cyan for all LEDs
	50...59	Constant unicoloured pattern in blue for all LEDs
	60...69	Constant unicoloured pattern in purple for all LEDs
	70...79	Constant unicoloured pattern in white for all LEDs
	80...89	Preprogrammed automatic show no. 1
	90...99	Preprogrammed automatic show no. 2
		⋮

Channel	Value	Function
	180...189	Preprogrammed automatic show no. 11
	190...199	LEDs off
	200...209	Constant unicoloured pattern in red for all LEDs
	210...219	Preprogrammed automatic show no. 12
	220...229	Preprogrammed automatic show no. 13
	230...239	Preprogrammed automatic show no. 14
	240...255	Sound-controlled show
2	Function depends on channel 1 setting	
	Channel 1 = 0...79	
	No function	
	Channel 1 = 80...239	
	0...255	Increasing speed

Channel	Value	Function
	Channel 1 = 240...225	
	0...255	Increasing sensitivity

7.5 Functions in 3-channel DMX mode (d.-P1)

Channel	Value	Function
1	0...255	Intensity red (0 % to 100 %) for all LEDs
2	0...255	Intensity green (0 % to 100 %) for all LEDs
3	0...255	Intensity blue (0 % to 100 %) for all LEDs

7.6 Functions in 4-channel DMX mode (d.-P2)

Channel	Value	Function
1	0...255	Intensity red (0 % to 100 %) for all LEDs
2	0...255	Intensity green (0 % to 100 %) for all LEDs
3	0...255	Intensity blue (0 % to 100 %) for all LEDs
4	0...255	Dimmer (0 % to 100 %)

7.7 Functions in 7-channel DMX mode (d.-P7)

Channel	Value	Function
1	0...255	Intensity red (0 % to 100 %) for all LEDs
2	0...255	Intensity green (0 % to 100 %) for all LEDs
3	0...255	Intensity blue (0 % to 100 %) for all LEDs

Channel	Value	Function
4	0...9	LEDs off
	10...19	Constant unicoloured pattern in red for all LEDs
	20...29	Constant unicoloured pattern in yellow for all LEDs
	30...39	Constant unicoloured pattern in green for all LEDs
	40...49	Constant unicoloured pattern in cyan for all LEDs
	50...59	Constant unicoloured pattern in blue for all LEDs
	60...69	Constant unicoloured pattern in purple for all LEDs
	70...79	Constant unicoloured pattern in white for all LEDs
	80...89	Preprogrammed automatic show no. 1
	90...99	Preprogrammed automatic show no. 2
		:
	180...189	Preprogrammed automatic show no. 11
	190...199	LEDs off

Channel	Value	Function
	200...209	Constant unicoloured pattern in red for all LEDs
	210...219	Preprogrammed automatic show no. 12
	220...229	Preprogrammed automatic show no. 13
	230...239	Preprogrammed automatic show no. 14
	240...255	Sound-controlled show
5	Function depends on channel 4 setting	
	Channel 4 = 0...79	
	No function	
	Channel 4 = 80...239	
	0...255	Increasing speed
	Channel 4 = 240...255	
	0...255	Increasing sensitivity
6	Function depends on channel 4 setting	

Channel	Value	Function
	Channel 4 = 0...9	
	No function	
	Channel 4 = 10...255	
	0...255	Strobe effect, increasing speed
7	0...255	Dimmer (0 % to 100 %)

7.8 Functions in 8-channel DMX mode (d.-P3)

Channel	Value	Function
1	0...255	Intensity red (0 % to 100 %) for all LEDs of spots 1 and 2
2	0...255	Intensity green (0 % to 100 %) for all LEDs of spots 1 and 2
3	0...255	Intensity blue (0 % to 100 %) for all LEDs of spots 1 and 2

Channel	Value	Function
4	0...255	Intensity red (0 % to 100 %) for all LEDs of spots 3 and 4
5	0...255	Intensity green (0 % to 100 %) for all LEDs of spots 3 and 4
6	0...255	Intensity blue (0 % to 100 %) for all LEDs of spots 3 and 4
7	0...255	Strobe effect, increasing speed
8	0...255	Dimmer (0 % to 100 %)

7.9 Functions in 14-channel DMX mode (d.-P4)

Channel	Value	Function
1	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 1
2	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 1
3	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 1

Channel	Value	Function
4	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 2
5	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 2
6	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 2
7	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 3
8	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 3
9	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 3
10	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 4
11	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 4
12	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 4
13	0...255	Strobe effect, increasing speed
14	0...255	Dimmer (0 % to 100 %)

7.10 Functions in 15-channel DMX mode (d.-P6)

Channel	Value	Function
1	0...9	RGB mode for channels 2 to 15
	10...249	Preprogrammed automatic shows
	250...255	Sound-controlled show
Functions of channels 2 to 15 depend on the setting of channel 1, 0...9		
2	0...255	Dimmer (0 % to 100 %)
3	0...9	No function
	10...255	Strobe effect, increasing speed
4	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 1
5	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 1
6	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 1
7	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 2

Channel	Value	Function
8	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 2
9	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 2
10	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 3
11	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 3
12	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 3
13	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 4
14	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 4
15	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 4

7.11 Functions of foot switch

Operating mode 'Automatic'

Press the foot switch [*Auto Run*] to start the playback of the preprogrammed automatic shows. Each time you press the switch, the next show will be called up.

Operating mode 'Sound-control'

Press the foot switch [*Sound Active*] to start the playback of the sound-controlled automatic shows. Each time you press the switch, the next show will be called up.

Operating mode 'Freeze'

Press the foot switch [*Freeze*] to freeze or unfreeze the show that is currently running.

Operating mode 'Blackout'

Press the foot switch [*Blackout*] for a blackout (all LEDs off). Press it again to return to normal operation.

7.12 Remote control functions

The button functions of the remote control are described in section  '*Infrared remote control (optional available)*' on page 29.

Direct selection of a static colour Use the numeric keys of the remote control to select a static colour directly. This setting is only relevant if the device is not controlled via DMX.

Value	Static colour
0	Cyan
1	Purple
2	Pink
3	Orange
4	Cool white
5	Light red
6	Light green
7	Light blue
8	Yellow
9	Warm white

Value	Static colour
10	Red
11	Green
12	Blue
13	Amber

7.13 Reset to factory defaults

Proceed as follows to restore the factory default settings:

1. ➤ Switch off the device.
2. ➤ Simultaneously press *[Mode]* and *[Setup]* and switch on the device, holding the two buttons for approx. 2 seconds.

8 Technical specifications

Number of DMX channels	2, 3, 4, 7, 8, 14 or 15 channels, depending on operating mode
Illuminant	28 × 3-W tri-colour LEDs (7 × per spot)
Dispersion angle	approximately 40°
Operating supply voltage	100 ... 240 V ~, 50 ... 60 Hz
Power consumption	100 W
Fuse	5 mm × 20 mm, 2.0 A, 250 V, slow
T-bar width	1200 mm
Height (T-bar + tripod)	max. 2400 mm
Weight	16 kg

9 Plug and connection assignment

Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment so that a perfect light experience is guaranteed.

Please take our tips, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into a socket, the result of an incorrect connection may be a destroyed DMX controller, a short circuit or 'just' a not working light show!

DMX connections



The unit offers a 3-pin XLR socket for DMX output and a 3-pin XLR plug for DMX input. Please refer to the drawing and table below for the pin assignment of a suitable XLR plug.

Pin	Configuration
1	Ground, shielding
2	Signal inverted (DMX-, 'cold signal')
3	Signal (DMX+, 'hot signal')

10 Cleaning

Optical lenses

Clean the optical lenses, that are accessible from the outside, regularly in order to optimize the light output. The frequency of cleaning depends on the operating environment: wet, smoky or particularly dirty surroundings can cause more accumulation of dirt on the optics of the device.

- Clean with a soft cloth using our lamp and lens cleaner (item no. 280122).
- Always dry the parts carefully.

11 Protecting the environment

Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are fed to a recovery. Please follow the notes and markings on the packaging.

Disposal of batteries



Batteries must not be disposed of as domestic waste or thrown into fire. Dispose of the batteries according to national or local regulations regarding hazardous waste. To protect the environment, dispose of empty batteries at your retail store or at appropriate collection sites.

Disposal of your old device



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE). Do not dispose with your normal household waste.

Dispose this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.



